



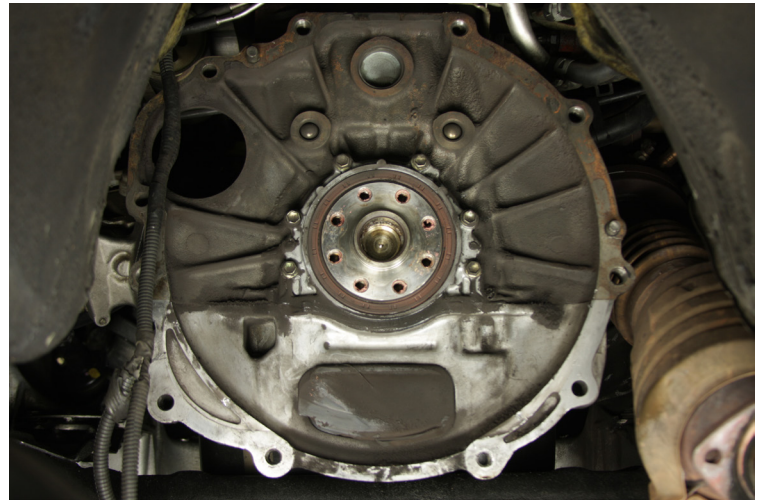



## How to install a TM4-16093-CONV conversion kit

1. Remove transmission from vehicle and place on a sturdy work surface in preparation for conversion.
2. Make sure transmission is clean.

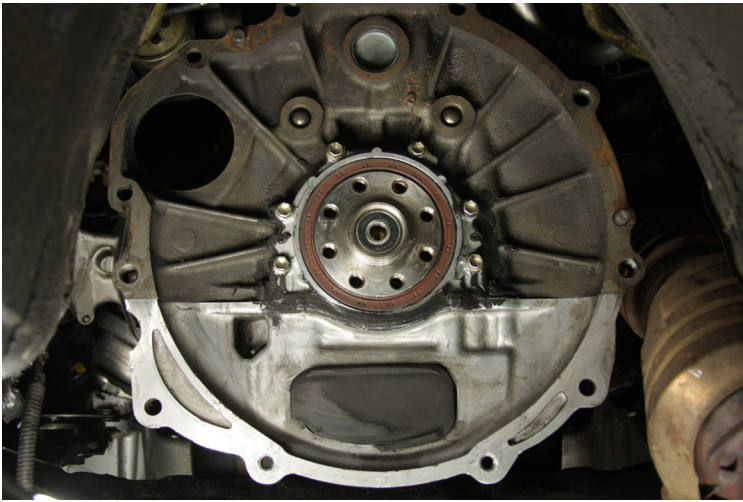

3. Remove factory release components. Clean transmission again. Do not damage the input shaft seal.

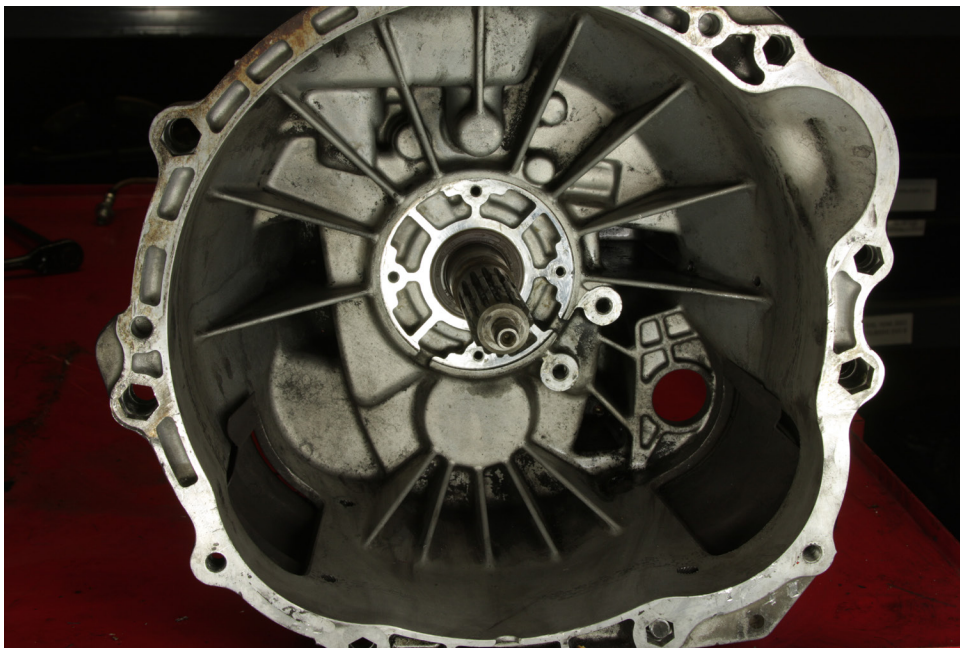

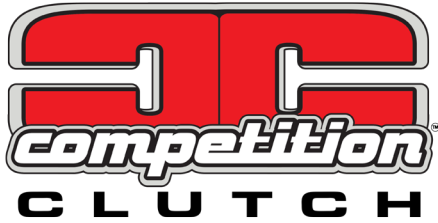

## How to install a TM4-16093-CONV conversion kit

4. Attach the adapter bracket to the base of the input shaft.



5. Thread hose through slave cylinder opening in transmission. Bolt the hydraulic release bearing to the adapter bracket and tighten to 6 ftlbs. Ensure release bearing is centered on the input shaft.



6. Using the supplied P-clamp, mount the hydraulic lines to the factory slave cylinder mounting bolt location. Tighten bolt to 8ftlbs.

